


Commercial Dehumidifier

Description

BioGenix Commercial dehumidifier is a device specifically designed for use in commercial environments to reduce ambient humidity and create a dry working environment. Its main function is to reduce ambient humidity by absorbing moisture in the surrounding air, thereby improving air quality, reducing the breeding of mold and bacteria, and improving the quality of the working environment. The working principle of commercial dehumidifiers is based on the way of moisture absorption and condensation, which converts the moisture in the air into a liquid state, thus effectively controlling the indoor humidity. This device not only provides a dry air environment, but also helps prevent mold and bacteria from growing and improves indoor air quality.

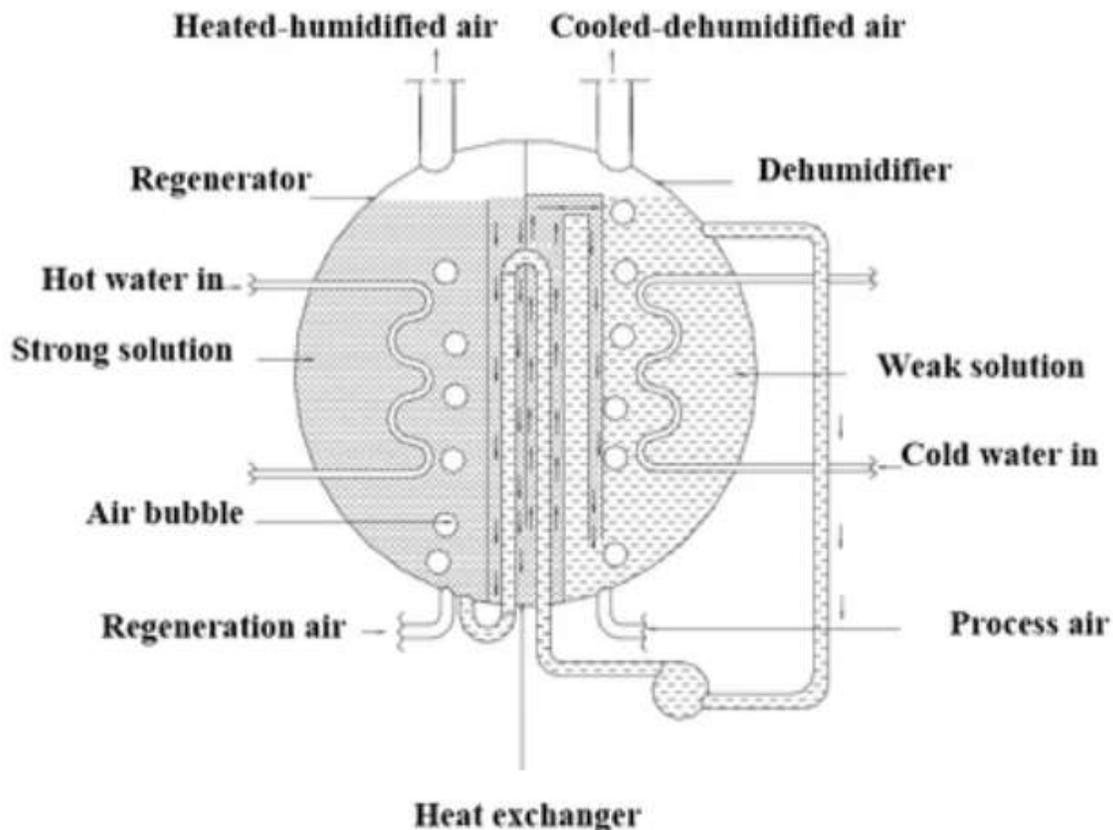

Technical Specifications

| Model | BS-DH-890D | BS-DH-8138D |
|---------------------------|---------------------------------|----------------|
| Humidity Removal Capacity | 90L/24H | 138L/24H |
| Humidity Adjusted Range | | |
| Air Circulation | 1100 m3/h | 1200 m3/h |
| Refrigerant | R410A | |
| Material | Cold Rolled Plate Coating | |
| Applying Area | 90~150m2 | 130~180m2 |
| Power Supply | AC 110V/60Hz; 220V±10%, 50/60Hz | |
| Consumption | 1300W | 1500W |
| External Size (W*D*H) | 480*420*960mm | 480*420*1060mm |
| Net Weight | 60kg | 65kg |
| Packing Size (W*D*H) | 540*460*1020mm | 540*460*1100mm |
| Gross Weight | 62kg | 67kg |

SALIENT FEATURES:

- * Microcomputer control, intelligent operation
- * LED display, indicate humidity
- * Low temperature available, efficient automatic defrosting system
- * Timing range: 1-24 hours
- * Pipe continue drainage function

STANDARD ACCESSORIES:

- Air filter (fitted inside main unit)
- Power Cord
- Instruction Manual



BIOGENIX SYSTEMS PRIVATE LIMITED

S-10, Pankaj Central Plaza, Pocket-5, Plot no-5,
Sector-12, Dwarka, New Delhi-110075, INDIA

Email: sales@biogenixsystems.com |

Phone: +91-11-43738899 | 9990251155-99 | 9911717057

Website: www.biogenixsystems.com

Dealer Details

info@biogenixsystems.com
www.biogenixsystems.com